

# WISE-2841M Quick Start

v1.0, November 2022

## **Packing List**

In addition to this guide, the package includes the following items:




#### Resources

### **Technical Support**

service@icpdas.com www.icpdas.com How to search for drivers, manuals and spec information on ICP DAS website.

• For Mobile Web

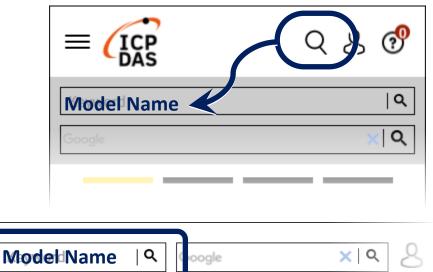


• For Desktop Web



PRODUCTS SOLUTIONS NEWS & EVENTS SUPPORT CORPORAT


## 1. Configuring the boot mode

Before starting WISE-2841M at the first time, be sure that the switch is placed in the "0" position.

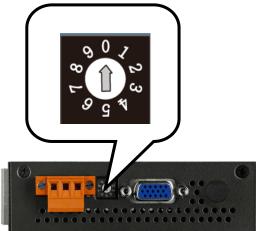

## 2. Checking the network setting

The WISE-2841M comes with the default IP setting:

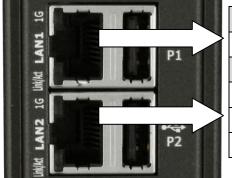

LAN1	Default
Network Setting	DHCP
LAN2	Default
IP	192.168.255.1
Mask	255.255.0.0
Gateway	192.168.0.1

### 3. Go to WISE-2841M's web site

• Open a browser, and type in the URL address of the WISE-2841M.



• You have to set the password before the first time to login.

<b>Web Inside, Smart Engine</b> Web Anywhere, Automation Anywhere!	When using WISE for the first time, please set a new password for the administrator:
	New Password Retype New Password Language: English
	Change password

 For more detail information, please refer to WISE-2841M's User Manual.